


Applying Storm Drain Medallions

- Locate an unmarked drain. Refer to provided map. Check off the drain that is marked as you go along.
- Locate the flattest surface around the storm drain. This could be next to the drain, on the curb, on a sidewalk directly behind the curb or on the metal top on the sidewalk (*medallion placement examples are on the back*).
- Storm drains in the street or parking lot do not need to be marked.
- Make sure the surface is clean and dry before applying the medallion. Use a wire brush, small broom, or a rag to remove loose debris.
- Squeeze adhesive on the back of the medallion in the patterns shown.
- Press the medallion down hard onto the surface, it is okay if adhesive squeezes out around the sides.
- Clean any residue from your hands immediately.

Glue Patterns

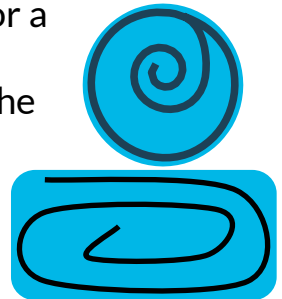

Tracking Marked Storm Drains

- A measurement of success for Clean Drains Fort Wayne is tracking the number and location of drains marked with a medallion.
- When you are done please fill out the form at forfw.org and attach your map with marked drains. Checked off maps and any extra supplies can be arranged for pick up through the forfw.org form.
- Check forfw.org periodically to see how far we are going to reach our goal of marking 2200 storm drains in 2022.

Medallion Placement Examples



Examples of Drains that are Marked



Some of the older medallions have faded and it can appear as though the drains are not marked, these do not need to be re-marked.